

Registration and Changes of Take-off and Landing Area

Table of Contents

01. Flow of Registration and Changes (Update/Deletion) of Take-off and Landing Area
02. New Registration of Take-off and Landing Area [Select Registration and Changes of the Take-off and Landing Area]
03. New Registration of Take-off and Landing Area [Select New Registration]
04. New Registration of Take-off and Landing Area [Register the Take-off and Landing Area]
05. Update/Deletion of Take-off and Landing Area [Select Registration and Changes of the Take-off and Landing Area]
06. Update/Deletion of Take-off and Landing Area [Select Update/Deletion of the Take-off and Landing Area]
07. Update of Take-off and Landing Area [Update the Take-off and Landing Area]
08. Deletion of Take-off and Landing Area [Delete the Take-off and Landing Area]


01. Flow of Registration and Changes (Update/Deletion) of Take-off and Landing Area 1/2

The following shows the flow when newly registering the take-off and landing area using this system.

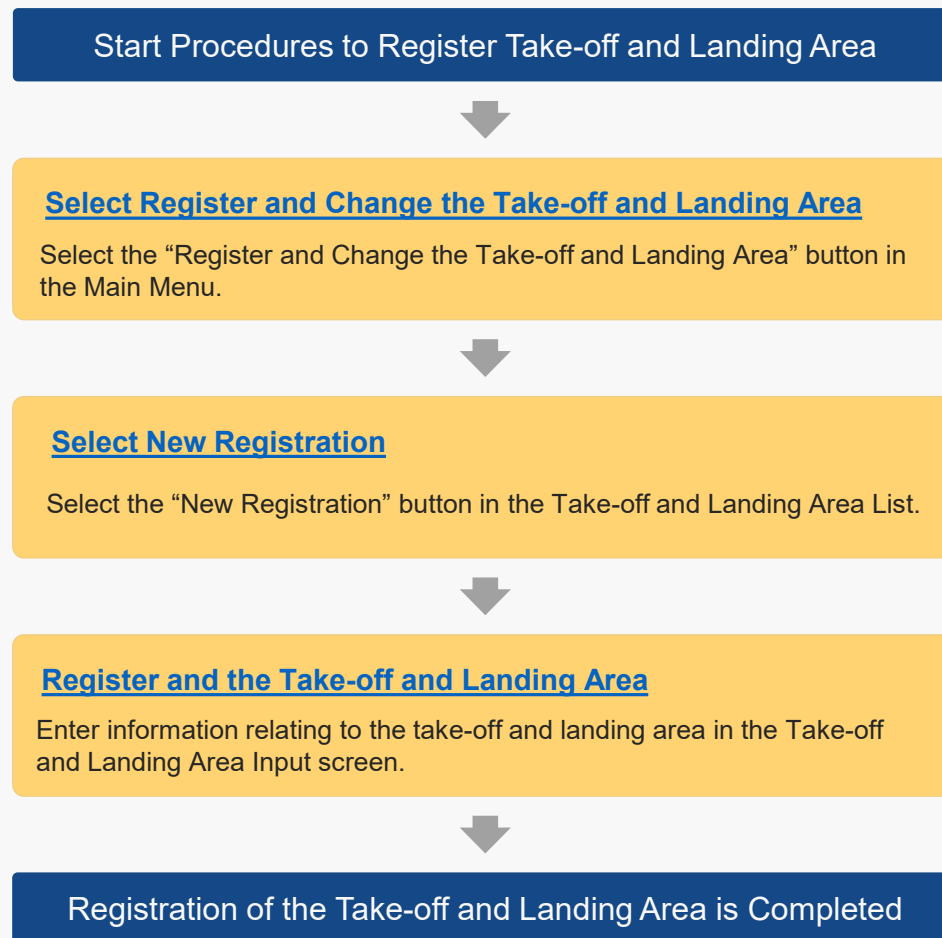

01. Flow of Registration and Changes (Update/Deletion) of Take-off and Landing Area 2/2

The following shows the flow when updating or deleting the take-off and landing area using this system.

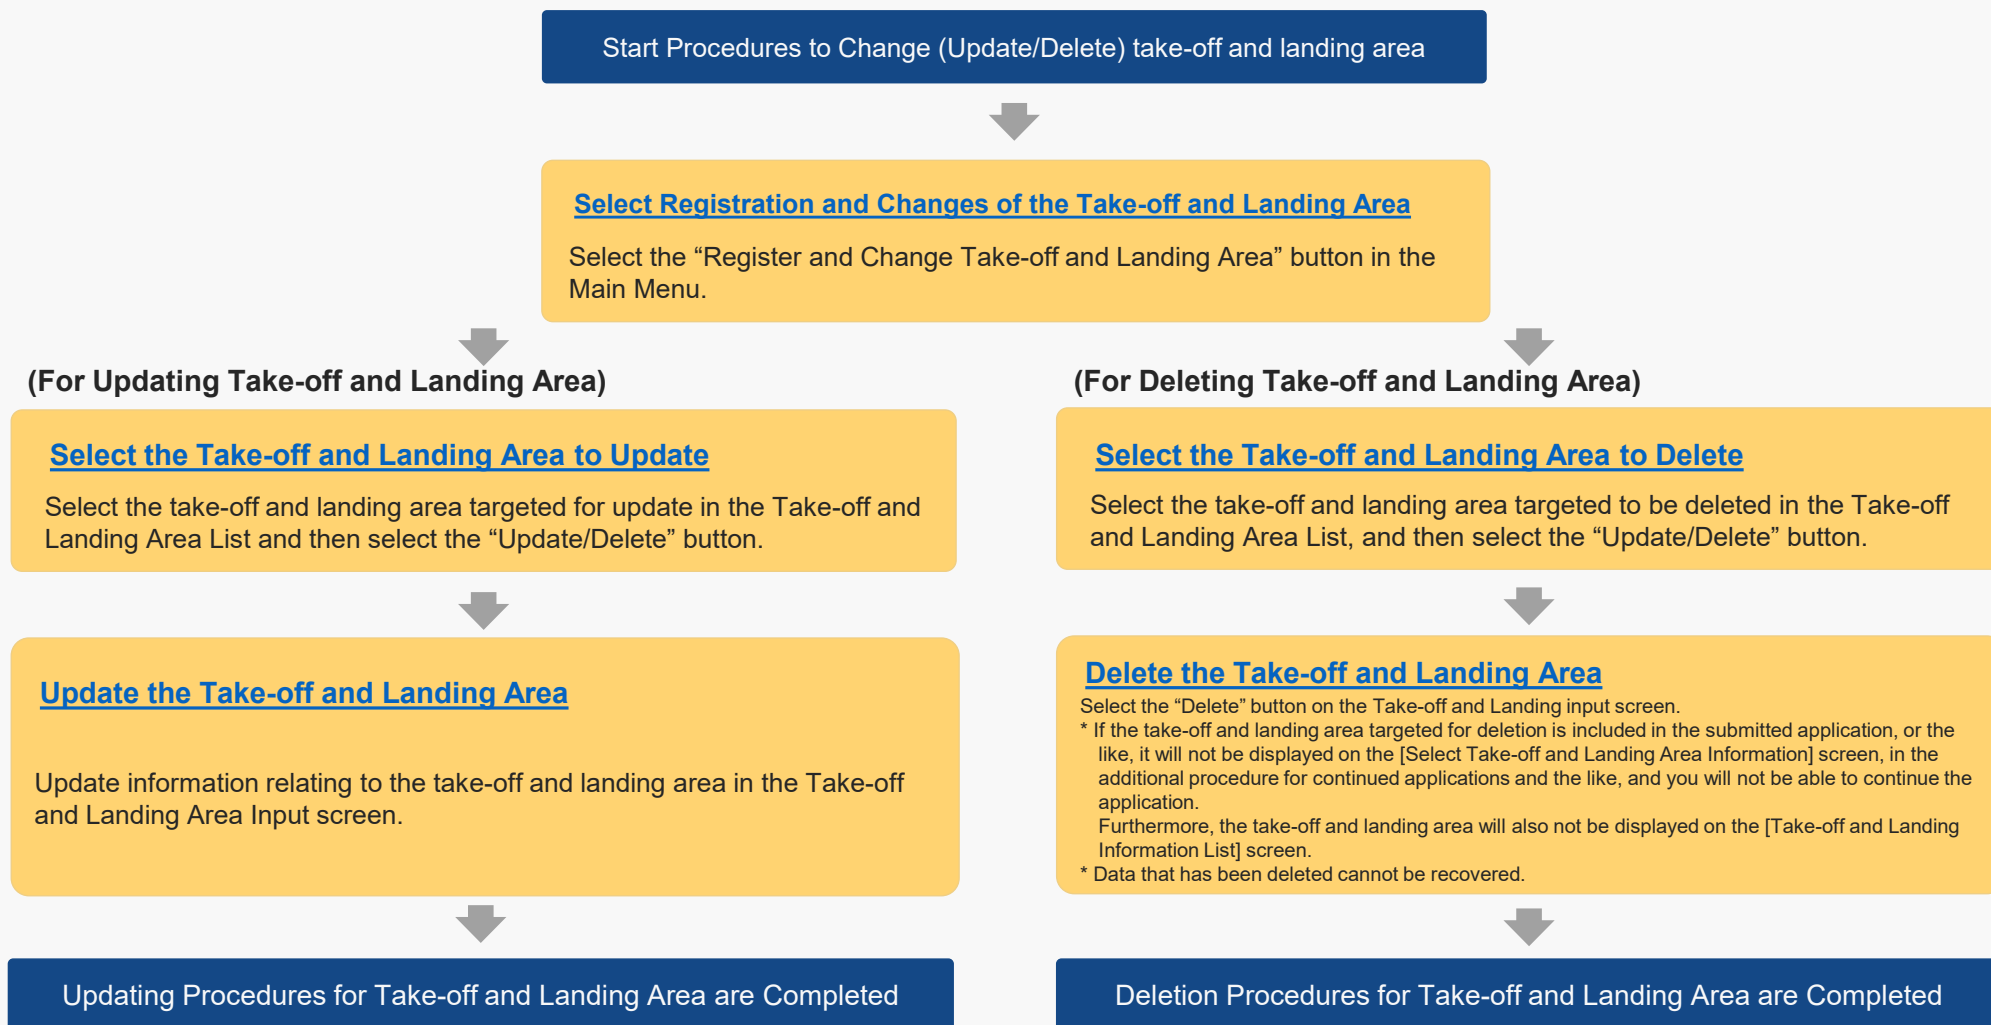

02. New Registration of Take-off and Landing Area [Select Registration and Changes of the Take-off and Landing Area]

Open the [Take-off and Landing Area List] screen from the [Main Menu] screen.




- (1) In the [Main Menu] screen, press in the heading [Preparation of Information Necessary for Application for Permission (Notification)].



The [Take-off and Landing Area List] screen opens.

03. New Registration of Take-off and Landing Area [Select New Registration]

Implement a new registration for the take-off and landing area in the [Take-off and Landing Area List].



国土交通省

AOPS

マニュアル

よくある質問

● ● ● ● ●

さん

離着陸場所一覧

登録された離着陸場所の一覧を表示します。場外地ID、名称、住所、種別で絞り込み検索が可能です。

「新規登録」ボタンを押下すると、新規の離着陸場所を追加することができます。

「更新/削除」ボタンを押下すると、離着陸の更新/削除、詳細の確認を行うことができます。

場外地ID

名称

住所

種別

選択してください

検索

新規登録

(1)

場外地ID	名称	住所	種別	離着陸の時間帯	灯火施設	更新/削除
<div>戻る</div>						

個人情報保護

利用規約

 
動作環境

アクセシビリティ

関連リンク

Copyright© MLIT Japan. All Rights Reserved.

↑

(1) Press  in the [Take-off and Landing Area List] screen.



The [Take-off and Landing Area Input] screen opens.

04. New Registration of Take-off and Landing Area [Register the Take-off and Landing Area] 1/3

Enter information relating to the take-off and landing area in the [Take-off and Landing Area Input] screen.

Enter information relating to the take-off and landing area in the [Take-off and Landing Area Input] screen.

(1) Name

Enter the name of the take-off and landing area.

Names cannot be entered using double-byte characters.
(When entering using alphanumeric characters, use single-byte characters.)

You can enter up to 128 characters.

(2) Name in Furigana

Furigana (pronunciation) of the take-off and landing area name can be entered using double-byte katakana, double-byte or single-byte spaces, and symbols (ー, ・, ～).

You can enter up to 128 characters.

(3) Address

(3)-1 Select "Prefecture," and enter the address including the street number below the municipality.

You can enter up to 364 characters.

(3)-2 When taking off and landing from the territorial sea or the open seas, check one of that applies, and enter details in the right column.

You can enter up to 100 characters in the details field.



04. New Registration of Take-off and Landing Area [Register the Take-off and Landing Area] 2/3

Enter information relating to the take-off and landing area in the [Take-off and Landing Area Input] screen. (Continued)

(4) Latitude (Optional)

Enter the latitude of the take-off and landing area using single-byte symbols.

Enter an integer in the range of -90 to 90 for the latitude (degrees).

Enter an integer in the range of -59 to 59 for the latitude (minutes).

Enter in the range from -59.999 to 59.999, using a range of 2 digits of integers and 3 digits for decimals for the latitude (seconds).

It is possible to enter the latitude (seconds) by omitting decimals or lower.

(5) Longitude (Optional)

Enter the longitude of the take-off and landing area using single-byte symbols.

Enter an integer in the range of -180 to 180 for the longitude (degrees).

Enter an integer in the range of -59 to 59 for the longitude (minutes).

Enter in the range from -59.999 to 59.999, using a range of 2 digits of integers and 3 digits for decimals for the longitude (seconds).

It is possible to enter the longitude (seconds) by omitting decimals or lower.

(6) Type

Select the type of the take-off and landing area from the pull-down list (below).

[Above Ground (General)/Above Ground (Special Area)/Above Ground (Disaster Prevention Response)/Buildings (General)/Structures Other than Buildings (General)/Structures Other than Buildings (Special Areas)/Above Ground (Routes)/Buildings (Routes)]

(7) Landowner (or Land Manager) (Optional)

(7)-1 Enter the Landowner (or Land Manager) Name of the Take-off and Landing Area. Double-byte characters cannot be used. (When entering using alphanumeric characters, use single-byte characters.) You can enter up to 128 characters.

(7)-2 Enter the Landowner (or Land Manager) Contact (Telephone Number) (Double-byte characters cannot be used.) You can enter up to 128 characters.



(4) 緯度 度 分 秒
*半角文字、60進法 (入力例: 35度39分29秒)

(5) 経度 度 分 秒
*半角文字、60進法 (入力例: 135度44分29秒)

(6) 種別 (必須) 選択してください

土地所有者 (又は土地管理者) (7)-1
*全角英数字入力不可、文字数128文字以下

土地所有者 (又は土地管理者) 連絡先 (7)-2
*文字数128文字以下

離着陸の時間帯 (必須) ☒ 終日
☐ 以下の時間帯で飛行します
 ~ ☒ 夜間を含む
*夜間に飛行する場合には必ずチェックしてください。

灯火施設 ☐ 設置する灯火施設にチェックしてください。灯火施設の設置基準は [こちら](#) を参照ください。
☐ 飛行場灯台
☒ 風向灯 (必須)
☐ 滑走路境界灯
☒ 境界灯 (必須)
☐ 境界誘導灯

04. New Registration of Take-off and Landing Area [Register the Take-off and Landing Area] 3/3

Enter information relating to the take-off and landing area in the [Take-off and Landing Area Input] screen. (Continued)



(8) Time Zone at Take-off and Landing Area

Select "All Day" to implement take-off and landing during all hours.

When taking off and landing at a certain time, select from sunrise/sunset/00:00 to 23:00 (every 1 hour), 00 minutes to 55 minutes (every 5 minutes).

Also, if the take-off and landing time zone includes nighttime, always select "Includes Nighttime."

* If you select All Day, "Includes Night" is automatically checked.

(9) Lighting Facilities


If the take-off and landing time zone includes nighttime, select the installed lighting facilities.

If "Includes Night" is selected in the take-off and landing time zone, wind direction indicator light/boundary light is automatically selected.

If "Includes Nighttime" is not selected in the take-off and landing time zone, you cannot select a lighting facility.

(10) If there is no problem with the content entered, press .

A dialog box is displayed to check the take-off and landing area registration.

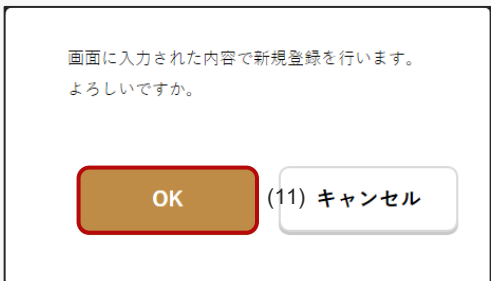

(11) Press to register information relating to the take-off and landing area.

After completing the registration, the [Take-off and Landing Area List] screen is displayed.

05. Update/Deletion of Take-off and Landing Area [Select Registration and Changes of Take-off and Landing Area]

Open the [Take-off and Landing Area List] screen from the [Main Menu] screen.



国土交通省 AOPS

マニュアル よくある質問 ● ● ● ● ●

メインメニュー

許可申請（届出）に必要な情報を準備する

航空機情報の登録・変更

申請を行う航空機情報を登録します。
申請書を作成する前に本情報が必要となりますので事前に登録してください。

操縦者情報の登録・変更

申請を行う操縦者情報を登録します。
申請書を作成する前に本情報が必要となりますので事前に登録してください。

同乗者情報の登録・変更

申請を行う同乗者情報を登録します。
最低安全高度以下の高度での飛行（法81条ただし書許可申請（届出））を行う際に本情報が必要となりますので、事前に登録してください。

離着陸場所の登録・変更 (1)

離着陸の申請を行う飛行場以外の場所（離着陸場所）の情報を登録します。
飛行場以外の場所における離着陸（法79条ただし書許可申請）を行う際に本情報が必要となりますので、事前に登録してください。

申請書（届出書）を作成する

申請情報一覧

申請済みまたは作成中の申請情報、届出情報の確認や許可書のダウンロードができます。

新規申請（新規届出）

新規に申請、届出を行います。
※申請を行う前に、航空機情報、操縦者情報、同乗者情報を登録してください。
※飛行場以外の場所における離着陸（法79条ただし書許可申請）を行う場合には、予め離着陸場所の情報を登録してください。

継続申請／再申請（継続届出／再届出）


許可された申請や届出の飛行期間を更新し、再度申請等を行います。
※飛行期間の更新にあわせて、元の許可申請の内容を一部変更することが可能です。
※過去に許可・届出実績のない場所で申請・届出行為を行う場合には、「新規申請（新規届出）」から申請してください。
※継続申請／再申請等で申請可能な飛行期間は [こちら](#) をご確認ください。

(1) In the [Main Menu] screen, press in the heading [Preparation of Information Necessary for Application for Permission (Notification)].

The [Take-off and Landing Area List] screen opens.

06. Update/Deletion of Take-off and Landing Area [Select Update and Deletion of the Take-off and Landing Area]

[Select the take-off and landing area targeted to be updated/deleted in the [Take-off and Landing Area List] screen.]



国土交通省

AOPS

マニュアル よくある疑問

離着陸場所一覧

登録された離着陸場所の一覧を表示します。場外地ID、名称、住所、種別で絞り込み検索が可能です。
「新規登録」ボタンを押下すると、新規の離着陸場所を追加することができます。
「更新/削除」ボタンを押下すると、離着陸の更新/削除、詳細の確認を行うことができます。

場外地ID 名称 住所 種別
選択してください

検索 (1)

新規登録

場外地ID	名称	住所	種別	離着陸の時間等	灯火施設	更新/削除
000001	札幌飛行場	北海道札幌市東区丘路町	地上	終日	風向灯 境界灯	更新/削除 (2)

1 2

戻る

AOPS

個人情報保護 利用規約 動作環境 アクセシビリティ 関連リンク

Copyright© MLIT Japan. All Rights Reserved.

The registered take-off and landing area is displayed in the list. Also, if there are more than 21 cases, they will be displayed on multiple pages.

- (1) When searching for the takeoff and landing area, enter and select the [Off-site ID], [Name], [Address], and [Type], and the like. When you press **検索**, the corresponding takeoff and landing area is displayed.
- (2) From the list, press **更新/削除** for the take-off and landing area that you want to update/delete.



The [Take-off and Landing Area Input] screen is displayed.

07. Update of Take-off and Landing Area [Update the Take-off and Landing Area] 1/2

Update information relating to the take-off and landing area in the [Take-off and Landing Area Input] screen.



国土交通省

AOPS

マニュアル よくある質問 ● ● ● ● ●

離着陸場所の入力

離着陸場所の情報を修正し、「更新」ボタンを押下してください。
削除する場合は、「削除」ボタンを押下してください。

離着陸場所

更新日時 2024/09/06 15:12:55 (1)

場外地ID 000001 (2)

名称 (必須) 札幌飛行場
*全角英数字入力不可、文字数128文字以下

名称フリガナ (必須) サッポロヒコウジョウ
*全角カタカナまたは全角半角スペース、文字数128文字以下

住所 (必須) 北海道 札幌市東区白珠町
※市区町村以下(番地を含む)を記載ください
*文字数364文字以下

☐ 標準上 ☐ 公海上 (例: ○○県沖合等)
※詳細を記載してください
*文字数100文字以下

緯度 43 度 分 秒
*半角文字、60進法 (入力例: 35度39分29秒)

経度 141 度 分 秒
*半角文字、60進法 (入力例: 135度44分29秒)

種別 (必須) 地上 (一般)

土地所有者 (又は土地管理者) 土地管理者
*全角英数字入力不可、文字数128文字以下

土地所有者 (又は土地管理者) 011-785-7871
連絡先 *文字数128文字以下

Information relating to the take-off and landing area selected in the [Take-off and Landing Area List] is displayed.
Also, the input method for each item is the same as “04. New Registration of Take-off and Landing Area [Register the Take-off and Landing Area].”

(1) Update Date and Time

The date and time of the registration or update of information relating to the take-off and landing area is displayed.

(2) Off-site ID

This is the system ID that uniquely identifies the take-off and landing area.


07. Update of Take-off and Landing Area [Update the Take-off and Landing Area] 2/2

Update the take-off and landing area in the [Take-off and Landing Area Input] screen. (Continued)



(3) If there is no problem with the content entered ,
press **更新** .


A dialog box is displayed to check the update of the take-off and
landing area.

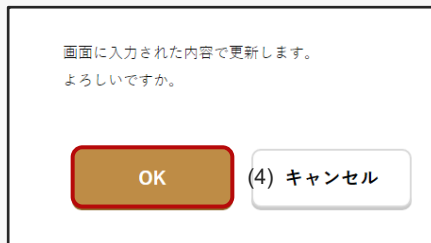


(4) Press **OK** to update information relating to the take-off and
landing area.


08. Deletion of Take-off and Landing Area [Delete the Take-off and Landing Area]

Delete information relating to the take-off and landing area in the [Take-off and Landing Area Input] screen.

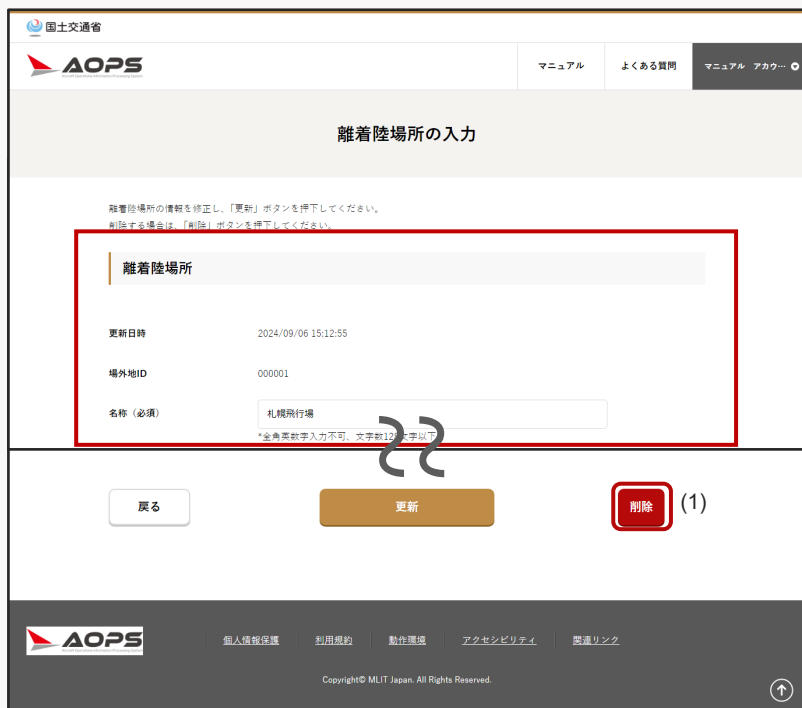

Information relating to the take-off and landing area selected in the [Take-off and Landing Area List] is displayed.

- (1) If there is no problem with target to be deleted, press . A dialog box is displayed to check the deletion of the take-off and landing area.

- (2) Press  to delete information relating to the take-off and landing area.

- * If the take-off and landing area targeted for deletion is included in the submitted application, or the like, it will not be displayed on the [Select Take-off and Landing Area Information]] screen, in the additional procedure for continued applications and the like, and you will not be able to continue the application. Furthermore, the take-off and landing area will also not be displayed on the [Take-off and Landing Information List] screen.
- * Data that has been deleted cannot be recovered.
- * You can register new take-off and landing Area with the same information as the deleted take-off and landing Area .

